



Dimmer

Product and Installation Guide

www.mux.life

Product Overview

Mux Dimmer is a Wi-Fi enabled smart device, which allows you to control the intensity of any filament bulb and fan speed via the Mux Life App. Additionally you can set timers, apply schedules and control the devices via virtual assistants. Detailed statistics help you monitor the usage of your devices.

Features

- App Control
- Voice Control (compatible with Amazon Alexa and Google Assistant)
- Smart Scheduling and Automation
- Timers
- Smart Scenes
- Real time status notification
- Remote Management

Installation and Wire Connection


Refer to the following steps for installation of the Mux Dimmer.

Pre-Requisite for Installation


- A neutral wire.
- Two inches deep Sub-box.
- Electrical Tester.
- Screw Driver.
- Screw Nuts (available with the product).
- Electrical box dimensions 3.3x3.3x1.5 inches.

Front Side

Dimmer buttons
with LED status

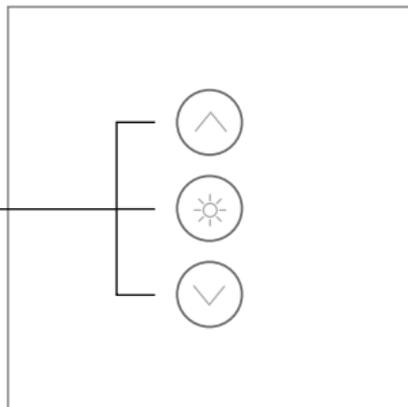

Screws

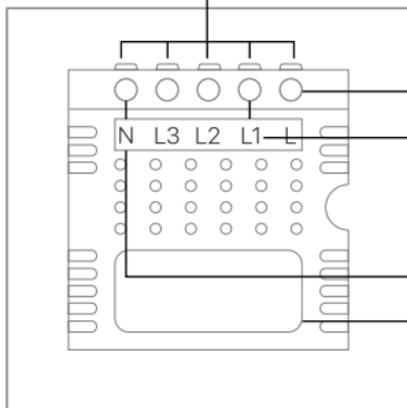

Live / Hot Wire

Out / Half (1)

Neutral Wire

Wi-Fi information


Back Side

If you have met the above electrical requirements, proceed with the installation:

Step 1


Switch off the circuit breaker of the respective room.

Use an electrical tester to confirm if electric current is passing through.

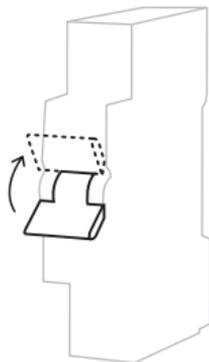


Step 2

Unscrew and Remove existing switch board.

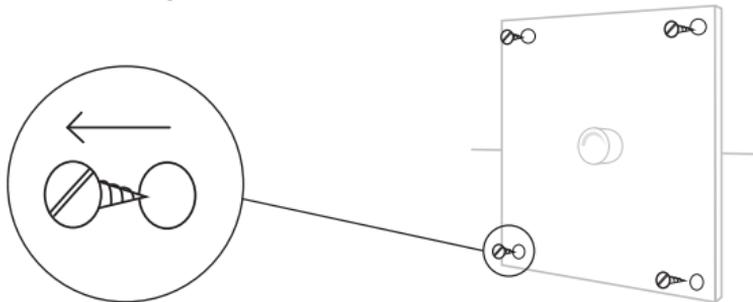

Step 3


Identify Live, Load, Neutral and Ground lines.

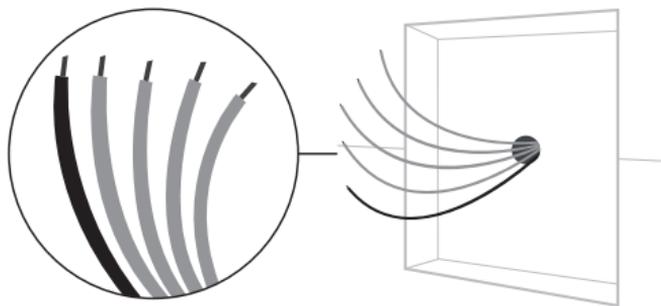

Step 4

Connect the Smart Device to your sub-box wiring as mentioned in the table.

L- Red Wire
N- Black Wire
L1 - Red Wire

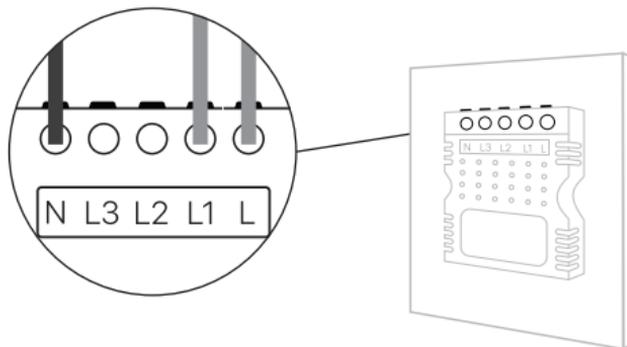


The table mentions sub-box wiring details.

Sub-box Wiring	Mux Dimmer
Live / Hot Wire	L
Neutral Wire	N
Out / Half (1)	L1

Step 5

Fix the Smart Device to the wall and look for the LED status.

For the LED status, see the table on next page.

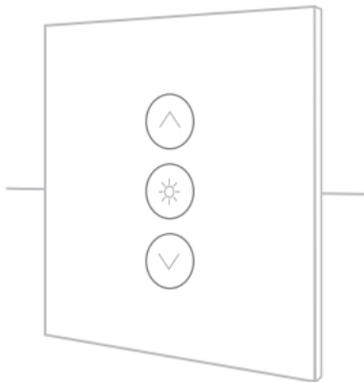

Product LED Status

LED Light	LED Status	Wifi Status	Description
Green Light	Very fast blink (0.03 sec)	Device already added in mux life account and looking for the saved wifi.	Check the power connection of your wifi routers where the device was connected.
	Fast Blink (< 0.5 sec)	Device in Broadcast Mode	You can add the device into your Mux account after resetting it.
	Slow blink (1 sec)	Device connected to Wi-Fi but has no internet access	Check internet connection on the Wi-Fi Router where device is connected.
	Stable ON	Device correctly configured	Device can perform all actions.

Reset Device

To put the device in reset mode, press and hold the down button (until it turns blue). Press the center button 7 times (until the light green LED starts flashing). The device is now in the reset mode. You can now add the device in your Mux Life account.

App Download

Download the Mux Life App from the Google Play / App Store or scan the QR code.



App Setup

Scan the QR code to watch an installation video to setup Mux Life App.



Caution

- Wrap electrical tape around the wire nuts to make sure the copper conductor is fully concealed.
- Do not install the Smart Device with wet hands or when standing on wet or damp surfaces.
- If you cannot find out a Neutral Line in your power line socket, consult with a professional electrician or contact our service team.