

Earth Clamp Meter UNI-T UT275

Code07720139

[Go to shop](#)



Professional earth clamp meter with build-in leakage meter UNI-T UT275

Safety Rating

CAT III 300V

Certifications

CE

EN:61010-1

EN:61326-1

EN:61010-2-032

Specifications

Earth Ground Resistance

0.01~0.099Ohm $\pm(1\%+0.01)$

0.1~0.99Ohm $\pm(1\%+0.01)$

1.0~49.9Ohm $\pm(1.5\%+0.1)$

50.0~99.5Ohm $\pm(2\%+0.5)$

100~199Ohm $\pm(3\%+1)$

200~395Ohm $\pm(10\%+5)$

400~590Ohm $\pm(20\%+10)$

600~1000Ohm $\pm(25\%+20)$

Leakage Current

0.00~299mA	$\pm(2.5\%+2\text{mA})$
0.30~2.99A	$\pm(2.5\%+100\text{mA})$
3.00~30.0A	$\pm(2.5\%+300\text{mA})$

Features

Display Count	9999
Auto Range	
Jaw Capacity	28mm
Auto Power Off	
Low Battery Indication	$\approx 5.2\text{V}$
Data Hold	
Data Logging	30
Data Recall	
LCD Backlight	
Auto Calibration	
Resistance Limit Alarm	

General Characteristic

Power	1.5V Alkaline Batteries(LR6) $\times 4$
LCD Size	47mm X 28.5 mm
Product Color	Red and Grey
Product Net Weight	1320g
Product Size	293mm X 90mm X66 mm
Standard Accessories	Batteries, Test Ring, Tool Box, Gift Box, English Manual

Manufacturer: UNI-TREND

Related products

Earth resistance meter UNI-T
UT521



Insulation resistance tester UNI-T
UT502A



Multimeter UNI-T UT531
(+insulation tester)



Please be careful before any links by 3rd party, not saying it is malicious this time...but you never know.



Pep Guardiola

Manual <https://drive.google.com/file/d/0B4Jyby-tjH5oUDg0ZINXTHlmZ0U/view>



David S

I just purchased the UNI-T UT275. None of the directions are in english. I really need to know the particulars of this met the owners manual in english?



Wendell

Hello,

I have Earth Clamp Meter UNI-T UT275 and it is not turning on. But he also, after 3 seconds off. What is the solution to



sarvari

Hi.

I have Earth Clamp Meter UNI-T UT275. but now there is a problem. After 3 second of turning on, automatically it turne me. please send me user manual or ... to help me pass this problem as soon as possible