
Instruction Manual RC-17/17N Disposable Temperature Recorder





Product instruction diagram

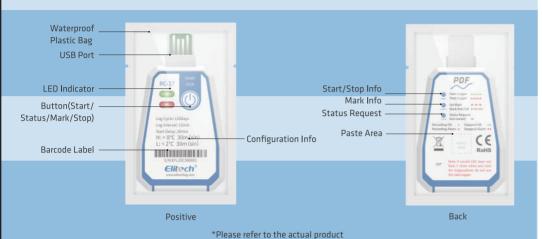

product description

This temperature recorder is mainly used for temperature monitoring and recording of food and medicine storage and transportation environments, such as refrigerated bags, refrigerated trucks, containers, etc.

This product is connected to a computer via USB, and the recorded data is directly output as a PDF report; the temperature probe is built-in, powered by a CR2450 wide temperature lithium battery, and the waterproof level reaches IP67. The product is equipped with a barcode,

Technical Parameters

Il function-related parameters of this recorder are configured by the factory, and users can customize some of these parameters according to their needs;

| Measuring temperature | -30°C ~ 70°C resolution 0.1°C | Data interface | USB2.0 |
|-----------------------|--|------------------|---------------------------------------|
| Storage temperature | -30°C ~ 70°C | Report type | PDF format data report |
| Temperature | 0.5°C/0.9°F (-20°C ~ 40°C); | Power supply | Built-in CR2450 wide |
| measurement accuracy | 1°C/1.8°F (other) | | temperature lithium battery |
| Sensor | Built-in NTC | Battery life | 2 years of storage and use in |
| Recording | capacity of 16000 groups (maximum) | | normal temperature environment |
| Recording period | 6、15、30、60、90、120、180 days (customizable) | Protection grade | IP67 |
| Alarm type | single type (Sin), cumulative type (Cum) | Dimensions | 93*58*8mm (length * section * height) |
| Alarm threshold | Factory default (customizable) | Weight | about 20g |

(Note: Before the recorder is started, it is recommended to store at room temperature

www.elitechlog.com

Parameter description: Maximum 16000 groups, the actual recording capacity is different due to different recording periods; Start-up delay: After the recorder is started, it waits for the set delay time to start recording, and the delay time can be customized; Alarm threshold: According to the threshold, the alarm interval can be set. The temperature recorder supports a temperature upper limit and a temperature lower limit setting:

| Н | The interval greater than H is the ultra-high temperature alarm interval |
|---|--|
| L | The interval less than L is the ultra-low temperature alarm interval |

Alarm delay:

1

| Single type | the recorder performs a single timing of continuous over-temperature events |
|-----------------|---|
| Cumulative type | the recorder counts all over-temperature events cumulatively |

Alarm delay: When the temperature enters the over-temperature alarm zone, the recorder will not alarm immediately. Only when the over-temperature duration exceeds the alarm delay, the alarm will start;

Operating instructions



2





Long press for 5 seconds to start recording, the green light flashes 5 times

Tear off the barcode for use

Press and hold the button for 5 seconds to stop recording, the red light flashes 5 times, tear open the plastic bag, reveal the USB interface

Insert the recorder into the USB port of the computer to view the PDF data report

NFC operation instructions

1. Install and log in to the APP

Use the mobile browser to scan the QR code or download and install'Elitech iCold' through the mobile application center; open the APP and follow the prompts to register and log in to a new account.

2. Parameter setting

Click the navigation button in the upper left corner of the APP. , select the NFC temperature label, and then approach the device to view the data (enable the NFC function of the mobile phone).

Click the (symbol) in the upper right corner to set the parameters. After the setting is completed, the mobile phone is close to the device and click the OK' button to save the parameters (the parameters are only allowed to be set when the device is not recorded)

3. View and export data

After the phone near the device, reading device data, click on the upper right corner 🔒 to select the desired report format export data report.



